

Hoist and Railway Service Instructions

All Marine Railways and Boat Hoist should be removed from ice for the winter.

Railways:

- Remove track sections from shoreline into the water. Lubricate and inspect railway for worn fasteners, replace if worn or corroded.
- Inspect winch gear box for oil level and water condensation. The gear oil should be replaced annually. Cover winch for winter storage.
- Inspect cable, replace if worn or corroded.
- On push pull systems, inspect and lubricate cable return pulley.

Boat Hoists:

- Inspect and retighten loose fasteners, replace if worn or badly corroded.
- Inspect cables and tension, replace if worn or badly corroded.
- Inspect winch and lubricate gears, check for worn clutch pads.
- Cover winch for winter storage.
- Remove canopy cover and store in dry place. Inspect canopy for wear.

WARNING! Injury may result! Do not use or install products until instructions are read and understood. The purchaser assumes all risk and liability for loss, damage or injury to persons, animals or property arising out of use or misuse of, or inability to use, the Muskoka Leisure product.